
MMI with radio and standard sound system from January 2011



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



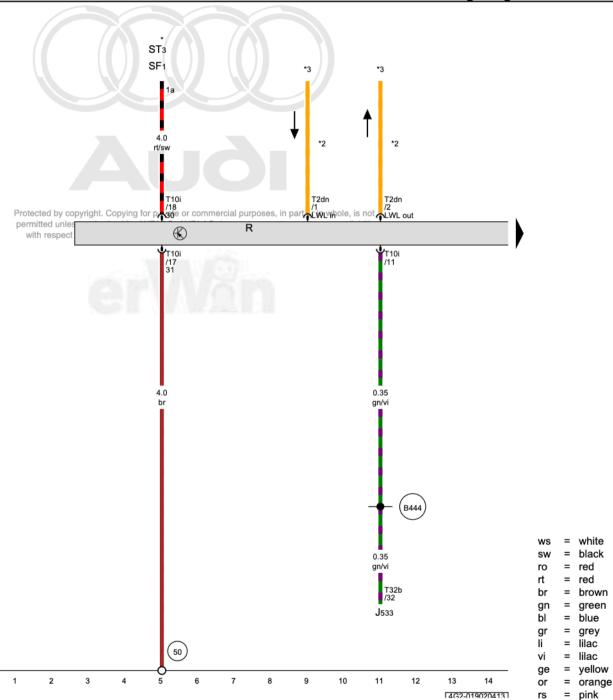



Radio

- J533 Data bus on board diagnostic interface
- R Radi
- SF1 Fuse 1 (on fuse panel F)
- ST3 Fuse panel 3
- T2dn Double connector
- T10i 10-pin connector
- T32b 32-pin connector
 - Ground connection in luggage compartment, left

(B444) OBD connection 1 (in main wiring harness)

- * Refer to applicable wiring diagram for fuse positions
- 2 Fiber optic cable
- *3 Refer to applicable wiring diagram for data bus networking

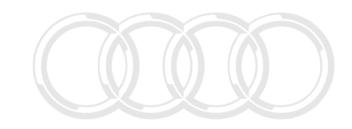

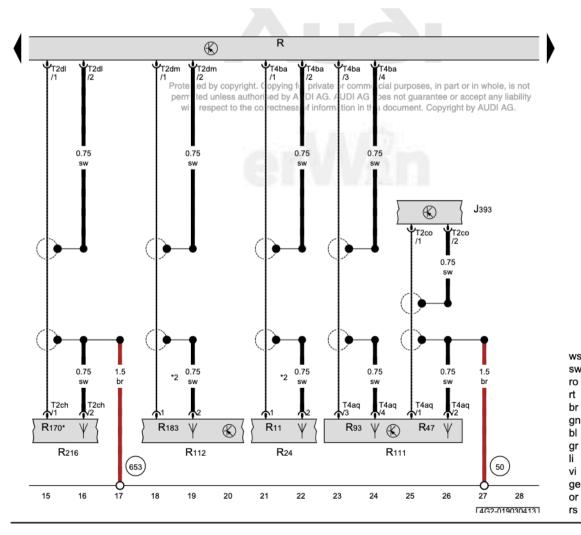

Radio, Antenna amplifier 2

- J393 Comfort system central control module
- R Radio
- R11 Antenna
- R24 Antenna amplifier
- R47 Central locking and anti-theft alarm system antenna
- R93 Radio antenna 2
- R111 Antenna amplifier 2
- R112 Antenna amplifier 3
- R170 Satellite antenna
- R183 Digital radio antenna
- R216 Roof antenna
- T2ch Double connector
- T2co Double connector
- T2dl Double connector
- T2dm Double connector
- T4aq 4-pin connector
- T4ba 4-pin connector
- (50) Ground connection in luggage compartment, left
- (653) Ground connection on left D-pillar
 - USA only

= white

= black

= brown = green

= blue = grey

= lilac

= lilac = yellow

= pink

= orange

= red = red *2 Only for vehicles without TV reception

R **®** T10i /10 T10i /14 0.75 0.75 br/bl gn/ge 1.0 1.0 bl/ws sw/ws bl/sw (B101 (B103 B103 (B102 B104 0.5 1.0 bl/ws bl/sw sw/ws bl/sw sw/ws T27a ■T27a 11/1 T27b 介/4 ■T27b 个/1 T23a T23b T23a T17I T17I 1 √1 T17I 州/2 Тт23ь T17I Protected by cor right. Copying for private or commercial purposes, in part or in whole, is not permitted unles0.5authorises by AUDI & AUDI Avinites not guarantee or accept any liability tion in this document. Copyright by AUDI AG. with respecibl/swhe corswctness of 1.0 1.0 0.5 0.5 0.75 0.75 1.0 1.0 bl/rt bl/ws sw/ws br/bl gr/sw ws/rt gn/ge gn/sw ro = red T2gy T2gx V1 T2gs V2 T2gy T2gw T2gw T2gu V2 = brown = green \square \square \square \square bl = blue = grey R₂₁ R₂₀ R208 R23 R22 = lilac = lilac = yellow 32 37 39 40 = orange or 4G2-019040413 rs = pink

Radio, Left front treble speaker, Left front bass speaker, Center speaker

Radio R20 Left front treble speaker R21 Left front bass speaker Right front treble speaker Right front bass speaker R208 Center speaker T2gs Double connector T2qu Double connector T2gw Double connector T2gx Double connector Double connector T8r 8-pin connector T10i 10-pin connector T17I 17-pin connector, in the left A-pillar connector station T23a 23-pin connector, on the left A-pillar 23-pin connector, on the right A-pillar T27a 27-pin connector, on the left A-pillar 27-pin connector, on the right A-pillar Left front speaker positive connection (in main wiring harness) B102 Left front speaker negative connection (in main wiring harness) Right front speaker positive connection (in main wiring harness) Right front speaker negative connection (in main wiring harness) from June 2011

R **® ₽**T10i 1.5 1.0 1.0 1.5 1.5 bl/ae br/an br/bl br/an rt/an T27c T27c T27d T27d 1.5 1.5 R72 R74 br/gn br/gn 1.5 1.5 bl/ge bl/ge R71 R73 1.5 1.5 0.75 0.75 1.5 1.5 0.75 0.75 bl/ge bl/ge br/gn bl/ge br/gn bl/ge br/gn br/gn T2gz T2go √2 T2go V1 T2hb T2gv T2gz T2ha \square \square \square \square \square R159 R14 R211 R160 R16 53 4G2-019050413

Radio, Left rear treble speaker, Left rear mid-bass speaker, Subwoofer

- R Radio
- R14 Left rear treble speaker
- R16 Right rear treble speaker
- R159 Left rear mid-bass speaker
- R160 Right rear mid-bass speaker
- R211 Subwoofer
- T2go Double connector
- T2qv Double connector
- T2gz Double connector
- T2ha Double connector
- T2hb Double connector
- T8r 8-pin connector

whiteblack

= red = red

bl

or

rs

= brown = green

= blue = grey

= lilac = lilac = yellow

= orange

= pink

- T10i 10-pin connector
- T27c 27-pin connector, on the left B-pillar
- T27d 27-pin connector, on the right B-pillar
- (R71) Speaker positive connection (in left rear door wiring harness)
- (R72) Speaker negative connection (in left rear door wiring harness)
- (R73) Speaker positive connection (in right rear door wiring harness)
- (R74) Speaker negative connection (in right rear door wiring harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.